



Forest Garden Ltd

Bamburgh Table Planter

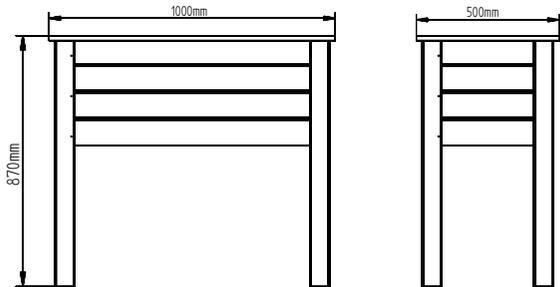

Thank you for choosing this garden product manufactured by the UK's largest manufacturer of timber garden products. In order to gain the most benefit from it, please note the following:


- This product is pressure treated to ensure the longevity of all timber components and to protect against rot. This may leave a colour difference on some parts that will even out as the moisture content stabilises.
- If there are any technical queries with the product, please contact our customer help line on 0844 248 9853 between the hours of 8.30 am and 5.00 pm Monday to Friday.
- Please ensure that you thoroughly check all component parts for quantity and quality before you commence building the product. If there are any missing parts, please contact the help line as shown immediately. The manufacturer cannot be held liable for damaged items once any part of the product has been fitted or altered in any way (e.g. Painted)
- Timber is a natural material. It will shrink and swell as a result of varying moisture content.
- Please keep all plastic bags and small parts away from children in order to reduce the risk of suffocation.
- This product must be built on a solid level base.

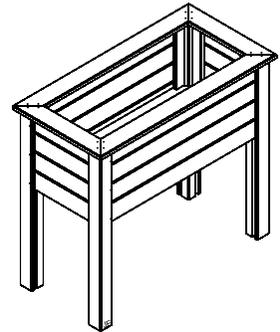

Recommended Tools




Important :
Assembly of this product requires two people.

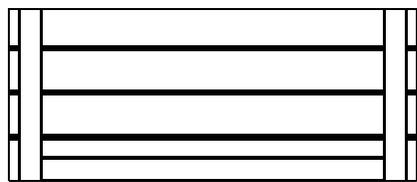


BPTLGINS
(Large Insert) Qty 2


BPTSMINS
(Small Insert) Qty 2

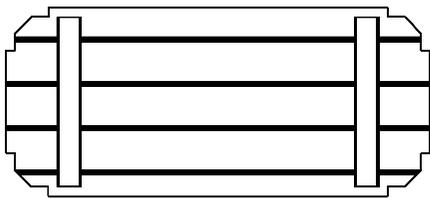

BP10050BASEPTR
(BASE) Qty 1

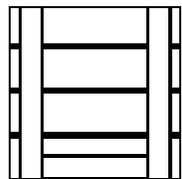


BPFASCIA500
(LEDGE) Qty 2



BPFASCIA1000
(LONG LEDGE) Qty 2



BPTLEG
(LEG) Qty 4

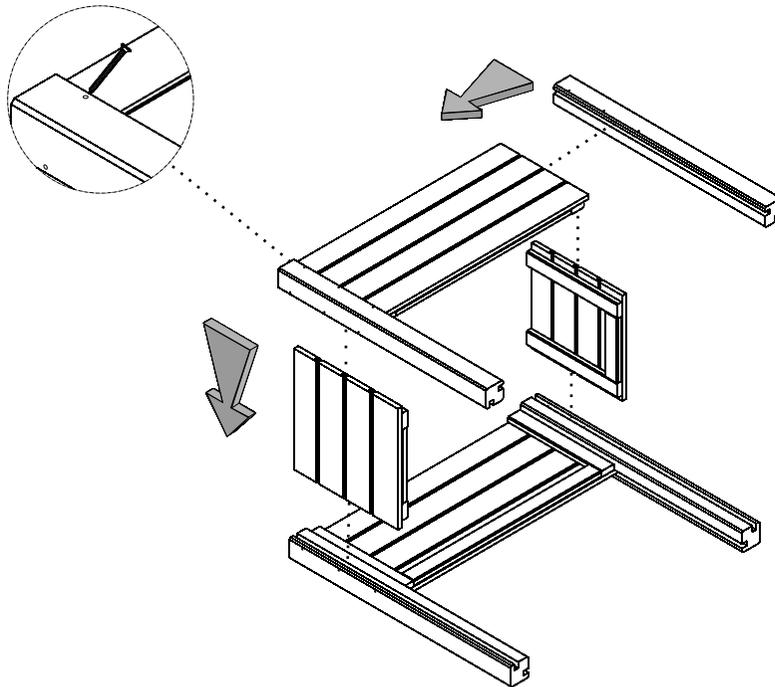

BPTFP
(Fixing pack)



40mm SCREW Qty 40









50mm SCREW Qty 4

Place a leg on either side of one of the large inserts, making sure that the insert's framework is on the inside and to the bottom, and that it is flush with the top of the leg. Fix each leg in place using 3 x 40mm screws in the pre drilled holes. Repeat for the other side.

Lay one of the completed sides on the ground and place both of the small inserts into the posts. Secure each in place using 3 x 40mm screws using the pre drilled holes.

Place the remaining side onto this and fix using 6 x 40mm screws. *Make sure all edges are flush*

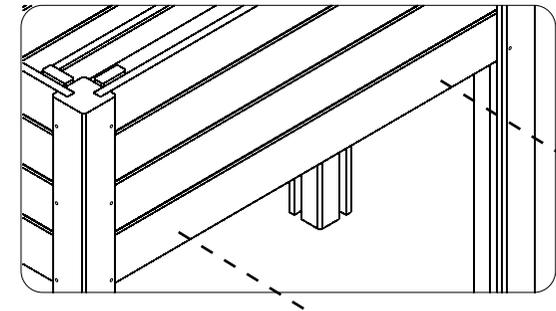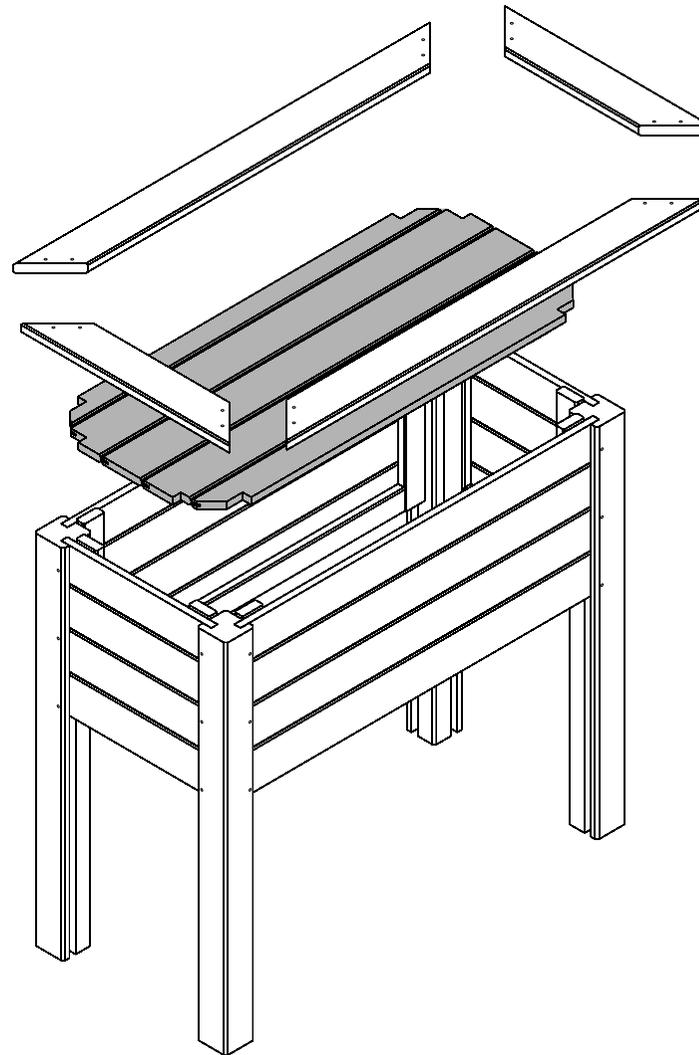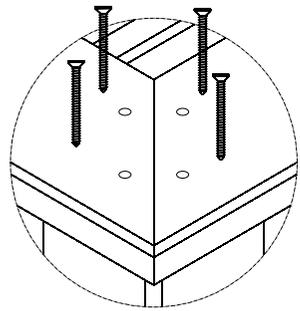

Slot the base into the planter so that it rests on the framework of the sides. Secure this in place by screwing from the outside of the two large sides and into the two battens underneath the base using 2 x 50mm screws for each side. Make sure you pre drill this first.

Place the ledges onto the planter making sure that the corners all meet and that this is flush and level. The ledges should overhang the the posts by approximately 20mm. Secure each ledge, using 4 x 40mm screws in the holes provided.